


See VTF Installation Guide For
Terminal Wire Size And Torque Information.
Notes: Maintain Clearance of 3 Inches On All Sides To Other Equipment.
Customer Is Responsible For Installation to
Meet All National And Local Electrical Codes.

Automation Direct Part#	Rated Voltage	Amps	Phase	Weight (LBS)
VTF-46-DE	600	2	3	8
VTF-246-CFG	600	3	3	8
VTF-246-DGH	600	4	3	8
VTF-246-H	600	6	3	8
VTF-246-GJ	600	8	3	8
VTF-246-HKL	600	12	3	8

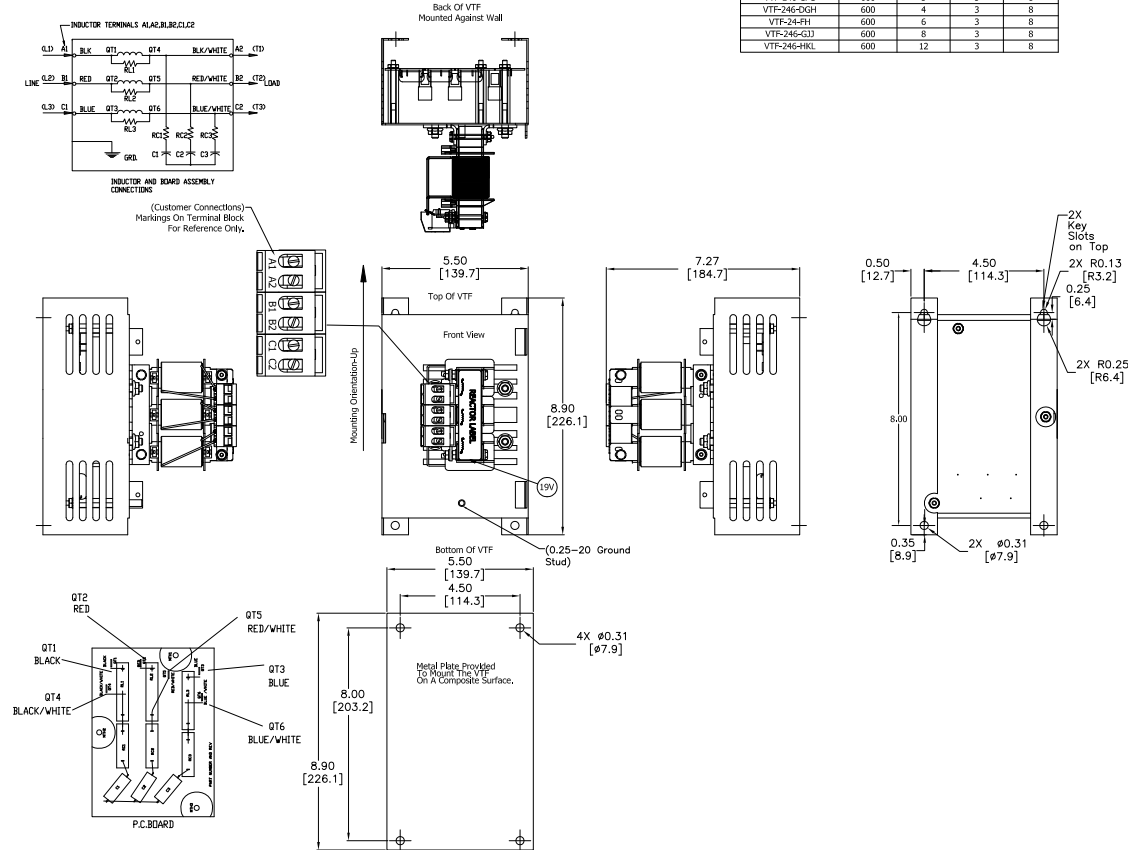

NOTES:

1. DIMENSIONS CAN BE CHANGED BY MANUFACTURER WITHOUT NOTICE.
2. DIMENSIONS DO NOT IMPLY TOLERANCE.

VTF-246-GJJ

Units: inches [mm]

Scale: Full

VTF SERIES OUTPUT FILTER,
230/460/575 VAC, 2HP, 5HP, 3-PHASE,
8A, OUTPUT SIDE ONLY

AUTOMATIONDIRECT.com