


See VTF Installation Guide For  
Terminal Wire Size And Torque Information.  
Notes: Maintain Clearance of 3 Inches On All Sides To Other Equipment.  
Customer Is Responsible For Installation to  
Meet All National And Local Electrical Codes.

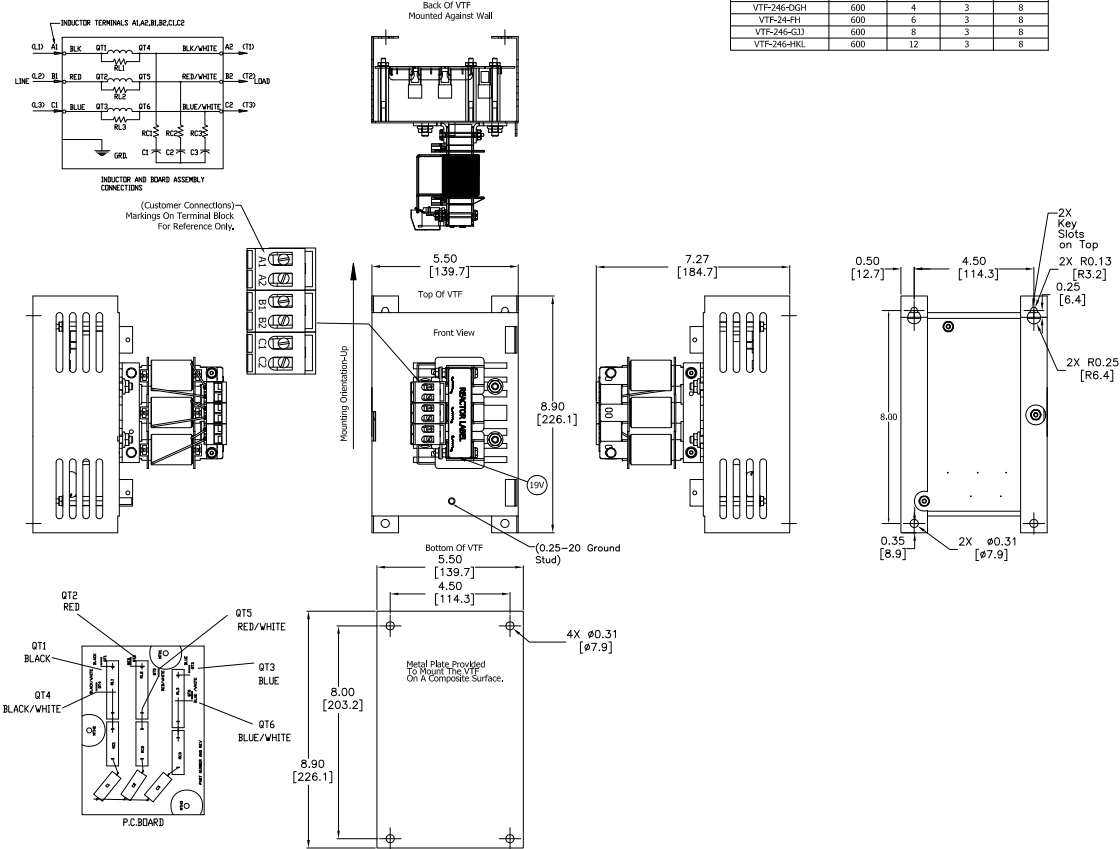

Automation Direct Part#	Rated Voltage	Amps	Phase	Weight (LBS)
VTF-46-DE	600	2	3	8
VTF-246-CFG	600	3	3	8
VTF-246-DGH	600	4	3	8
VTF-246-HI	600	6	3	8
VTF-246-GJ	600	8	3	8
VTF-246-HKL	600	12	3	8

# NOTES:

1. DIMENSIONS CAN BE CHANGED BY MANUFACTURER WITHOUT NOTICE.
2. DIMENSIONS DO NOT IMPLY TOLERANCE.

VTF-46-DE

Units: inches [mm]

Scale: Full

**VTF SERIES OUTPUT FILTER,**  
460/575 VAC, 3/4HP, 1HP, 3-PHASE,  
2A, OUTPUT SIDE ONLY

**AUTOMATIONDIRECT**.com