


See VTF Installation Guide For  
Terminal Wire Size And Torque Information.  
Note: Maintain Clearance of 3 Inches On All Sides To Other Equipment.  
Customer Is Responsible For Installation to  
Meet All National And Local Electrical Codes.

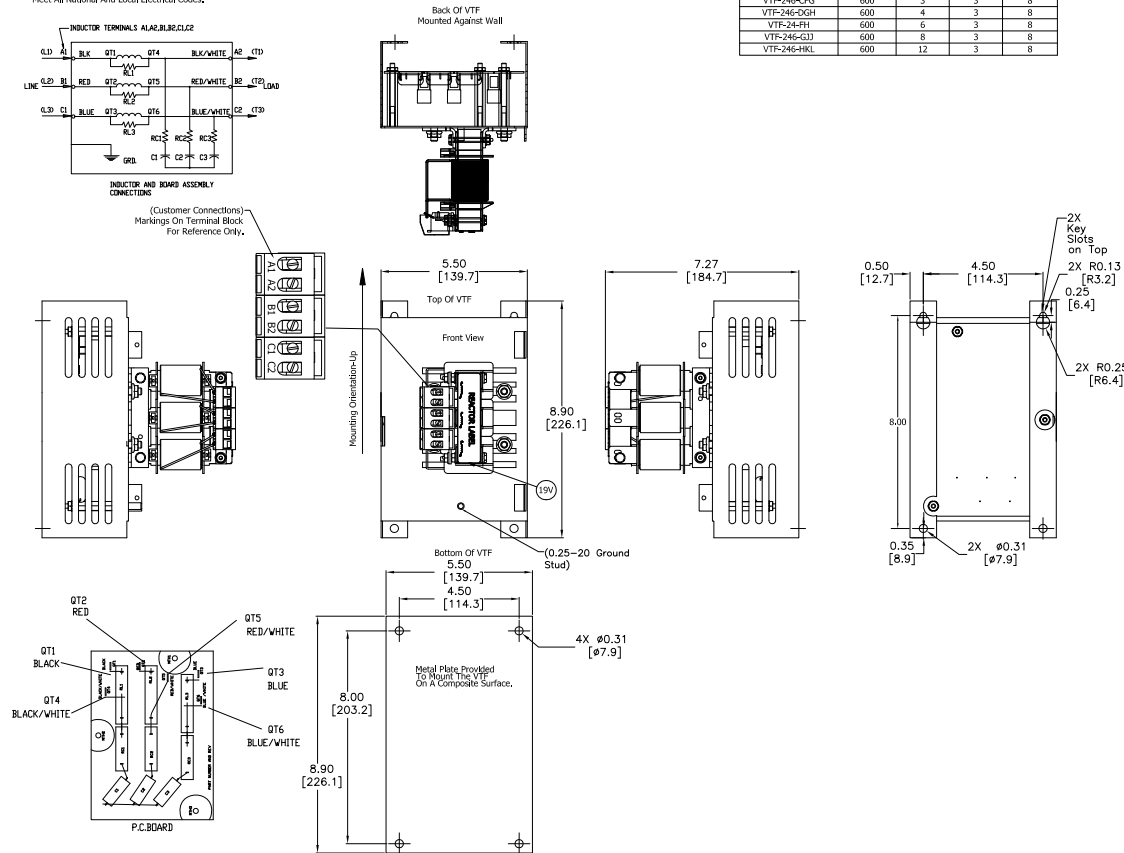

Automation Direct Part #	Rated Voltage	Amps	Phase	Weight (LBS)
VTF-46-DE	600	2	3	8
VTF-246-CFG	600	3	3	8
VTF-246-DGH	600	4	3	8
VTF-24-FH	600	6	3	8
VTF-246-G3J	600	8	3	8
VTF-246-HKL	600	12	3	8

# NOTES:

1. DIMENSIONS CAN BE CHANGED BY MANUFACTURER WITHOUT NOTICE.
2. DIMENSIONS DO NOT IMPLY TOLERANCE.

## VTF-24-FH

Units: inches [mm]

Scale: Full

**VTF SERIES OUTPUT FILTER,**  
230/460 VAC, 1-1/2HP, 3HP,  
3-PHASE, 6A, OUTPUT SIDE ONLY

