



NOTES:

1. DIMENSIONS CAN BE CHANGED BY MANUFACTURER WITHOUT NOTICE.
2. DIMENSIONS DO NOT IMPLY TOLERANCE.

GWR-LPLT

Units: mm [inches]
Scale: Full

ProSense SQUARE LAUNCHING PLATE
FOR USE WITH ProSense GWR SENSORS