





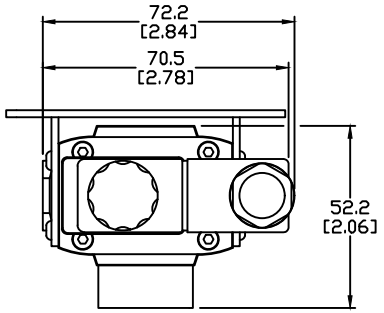

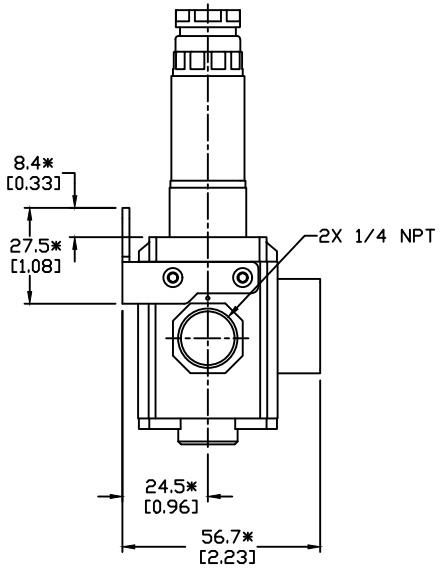

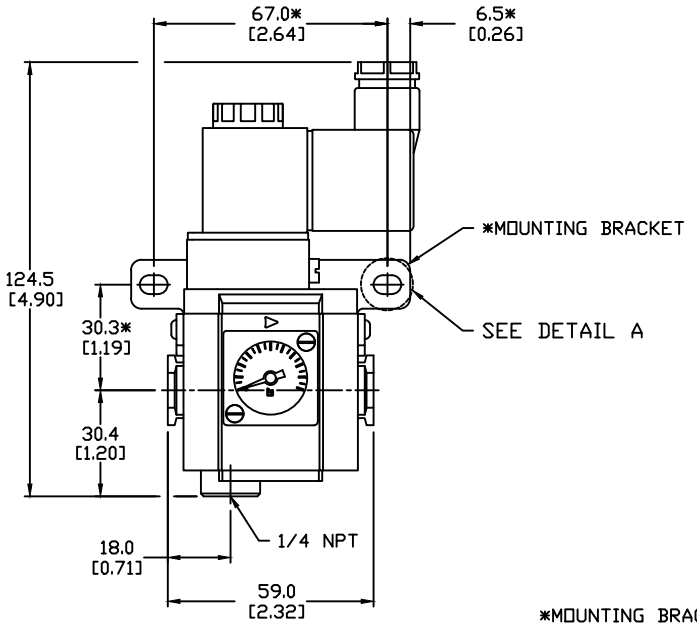

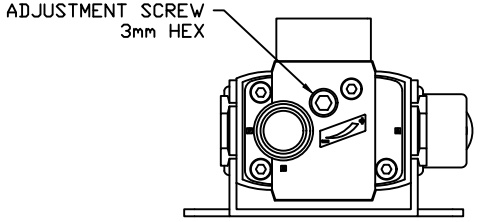

*MOUNTING BRACKET INSTALLATION OPTIONAL

ASD−22−120A
Units: mm [inches]
Scale: Full
SOFT-START DUMP VALVE 120VAC, 1/4 FNPT FOR AF-22, AR-22, AL-22 & AFR-22
AUTOMATIONDIRECT.com